

TOO

CHANGE FOR YOU

Please read this instructions carefully
before using the produce

Introduction:

Thanks for your purchase of a VOOPOO product. In order for you to have better use of all the functions of this product, please carefully read the operation notes and detailed functional instructions before your first use of this product. If you have any problems with using this product, please contact our local agent or visit our official website at www.voopoo.com.

Electrical Specifications:

Output Power: 5-80W(One battery)
5-180W(Dual batteries)

Battery: 1 x 18650 & 2 x 18650
(Support balance charging whatever brand batteries)

Size: 88 x 54 x 33mm

Lowest resistance in Power mode: 0.05Ω

Lowest resistance in TC mode: 0.05Ω

New function: SOTF Mode / supports vaping with single / dual batteries (Please put the battery on the battery tray A when using single battery)

TC MODE: SS, NI, TI, NC, TCR




Safety Protection Functions:

- A. Battery Reverse Protection
- B. Switch Timeout Protection: 10s
- C. Over-temperature Protection $\geq 85^{\circ}\text{C}$
- D. Output Over-current Protection $\geq 45\text{A}$
- E. Overcharge Protection $\geq 8.5\text{V}$
- F. Over Discharge Protection $< 6.4\text{V}$ (One battery $< 3.2\text{V}$)
- G. Short-circuit Protection $< 0.05\Omega$
- H. Support Balance Charge with Different Brand Batteries

Operating Instructions:

A. How to turn on/off: Press the fire button 5 times rapidly

B. Interface Introduction

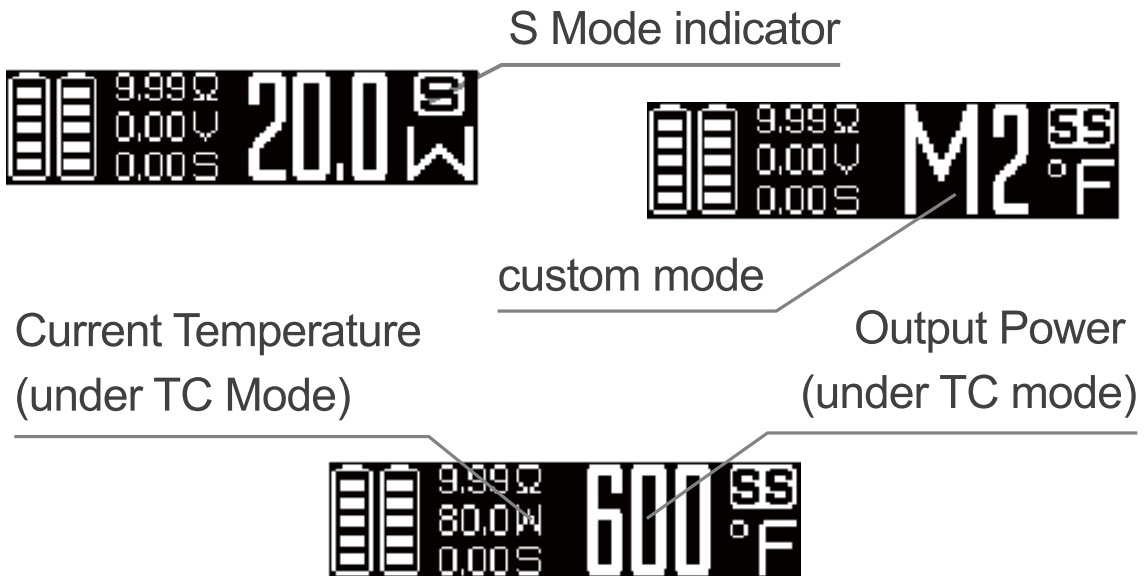

C. How to switch between Power and Temperature modes: Press the fire button 3 times rapidly to rotate between modes.

(W→SS316→Ni200→Ti)

D. TC Mode operating instructions:

1. Adjust the temperature by pressing the Up or Down buttons. The temperature setting will increase or decrease in 1 degree increment.

To switch from Celsius to Fahrenheit, press the down button until the temperature reaches the lowest Celsius temperature, 100°C. Release the down button and then press the down button again and the temperature will cycle to the highest Fahrenheit temperature, 600°F. To switch from Fahrenheit to Celsius, press the down button until the temperature reaches the lowest Fahrenheit temperature, 200°F. Release the down button and then press the down button again and the temperature will cycle to the highest Celsius temperature, 315°C.

2. For rapid scrolling, press and hold the up or down buttons for over 2 seconds to activate accelerated scrolling.

To adjust wattage while in TC Mode, press fire button 4 times rapidly to activate wattage adjustment. You will see the “W” wattage icon flashing. The wattage can be adjusted between a range from 5W minimum to 80W.

E. Wattage Mode operating instructions:

Adjust the wattage by pressing the up or down button. The wattage will increase or decrease in 1W increment.





Notice:

The product automatically recommends the output wattage according to the resistance of the atomizer when it detects that a new atomizer has been attached.

F. Combination key instruction:

- a) Press Up and Down buttons at the same time for 2 seconds, the device will enter Function Menu Interface
- b) Press Fire button and Up buttons at the same time for 2 seconds to lock the adjustment buttons. To unlock, press the Up and Down buttons simultaneously.
- c) Press Fire button and Down button at the same time for 2 Seconds, the screen orientation will flip.
- d) Under the Custom Mode (Wattage/TC Mode), press the Fire buttons for 4 times to enter the customization interface.

G. Function Menu


To enter the function menu Interface press the Up and Down buttons simultaneously for 2 seconds. Press up or down button to scroll through the menu options. Press the Fire button to confirm your selection. Make your adjustments using the up or down buttons. When finished, press and hold the Fire button for 2 seconds to confirm and save. The display will return to the main display interface.



a. Under Power Mode the Function Menu Interface has the following options:



b. Under Temperature Control Mode the Function Menu Interface has the following options:

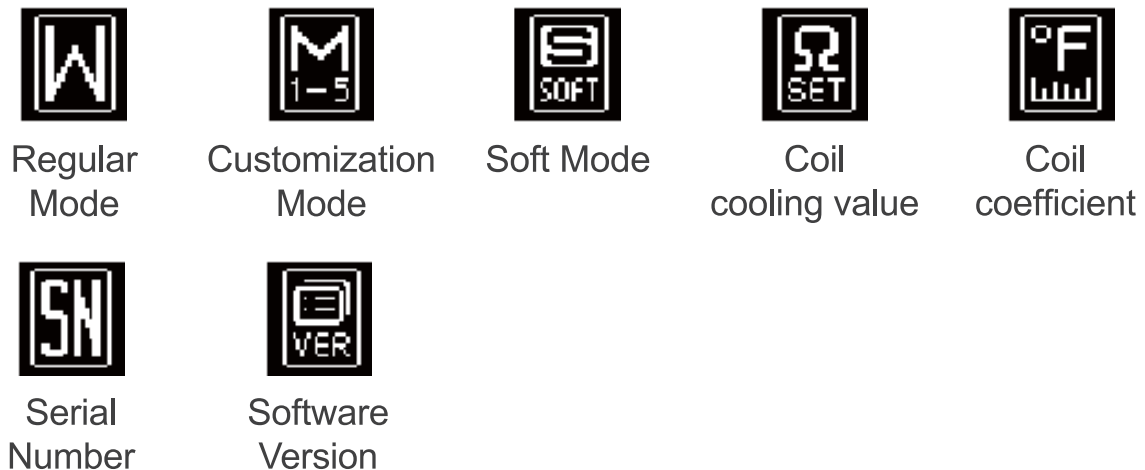

H. Customization Mode

Press up and down buttons simultaneously for 2S, the device will enter the Function Menu Interface. Press up button to select the Customization Mode



and press Fire button to confirm. The display

will change to the Custom Mode Interface.




Under Custom Mode, press the Fire button 3 times rapidly to switch between the four custom mode options: Stable Power (W) Mode and the three Temperature Control Modes: TC-SS/TC-NI200/TC-TI.

a) Press up or down button to scroll between Modes M1 to M5.

b) Press fire button 4 times rapidly to enter the custom power or temperature curve menu.

(Under Power mode, the upper right corner will show the adjustment power value. Under temperature control custom mode, the upper right corner shows the adjustment temperature control value)

To adjust the Power or Temperature curve, for each

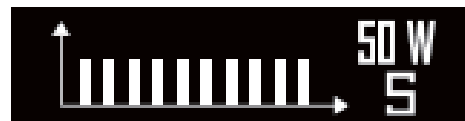

increment use the up or down buttons to raise or lower the adjustment value to the desired level, then press the fire button once to set the value and move to the next increment. When you have finished adjusting the curve, press and hold the fire button for two seconds to save and exit. The display will return to the Custom Mode Interface.

I. Sleep Mode:

If the device is not operated for 30 seconds, the screen will turn off. If there's still no operation for 30 minutes after the screen turns off, the device will enter sleep mode. If resistance was changed before sleeping

mode, screen will display the prompt “New Coil YES/NO” on interface; If resistance was changed in sleep mode, screen will not prompt YES/NO on the interface. Press any key to recover display from sleep mode.

J. Charging Mode

When the device is connected to an external power supply ($5 \pm 0.5V$) using the built-in USB charging port, the device will enter charging mode, and the small battery icon on the main display interface will blink and show the current charge status to indicate that charging has begun. If the device is not operated for 30 seconds, the device will switch to the full-screen battery icon (single cell as shown in Figure 1, double battery as shown in Figure 2). If there are two batteries with different charge levels, the two battery icons will show the charge levels of each. When the batteries are fully charged the battery icons will show full charge, and stop blinking.



Figure 1



Figure 2

K. VOOPOO Firmware Customization instructions
USB charging interface, the product into the charging mode. Charging mode of the first 30 seconds, the battery small icon will run as the

battery charging which shows that charging began. 30 seconds without any operate, The device will full-screen display battery power large icon running. Adding, removing, or changing Temperature control coil types using the VOOPOO Firmware

i. Select Customize from the menu on the left of the VOOPOO Firmware interface. In the Customize interface, click on the “Parameters” tab. On the left side of the Customize interface you will see a table labeled “Coil Advanced Setting and Select.

| Coil advanced setting and select | | | | |
|----------------------------------|---------------------|------|-------------|-------------------------------------|
| Index | Type | Icon | Coefficient | Select |
| 1 | Stainless Steel 316 | SS | 1300 | <input checked="" type="checkbox"/> |
| 2 | Ni 200 | Ni | 6500 | <input checked="" type="checkbox"/> |
| 3 | Ti | Ti | 4000 | <input checked="" type="checkbox"/> |
| 4 | NC | NC | 400 | <input type="checkbox"/> |
| 5 | TCR | TC | 1000 | <input type="checkbox"/> |

- ii. By default, your device comes with three temperature coil types pre-installed: Stainless Steel (SS316), Nickel (Ni200), and Titanium (TI). Two more TC types are available using the VooPoo APP: Ni-Chrome (NC), and a user definable type (TCR), which can be used for any additional coil types. All coil types can be enabled or disabled by checking / unchecking the box in the Select column, and the resistance coefficient can be customized for each by clicking the up or down arrows in the fields in the Coefficient column. See image below.
- iii. At least one coil type must be enabled, and a maximum of 5 coil types may be enabled.

L. Default Display Notifications



TIME OUT

Overtime using protection



NEW COIL YES(+) NO(-)

Checked atomizer but
new atomizer/coil or not



LOW BATTERY

Low Battery



CHECK BATTERY

Check battery Notification



ATOMIZER SHORT

Atomizer short



CHECK ATOMIZER

Check Atomizer



HIGH ATOMIZER

Resistance of coil too high



HIGH TEMP

Over temp



LOCK

Locked



UNLOCK

Unlock





OFF

Device going off

N. Tips

- a. Supported coil resistance range when the device setting is on 180W: 0.1-0.4Ω
- b. Charging Rate: 3H (Requirement: 5V 2A supply only)

- c. Supports charging while vaping (and also supports adjusting device settings while charging)
- d. Requirements for the specification of battery:
 - 1). 18650 battery with a discharge rate greater than 30A
 - 2). Same brand, model and specification when using two batteries
- e. Suggested Battery Brands: Sony, Samsung
- f. Screen Size: 0.91 Inch OLED
- g.  Accommodation coefficient of the TC wire:
Regulating Temperature Control wire default Value 

NI: 6000~7000 Standard Default Value:

6500 Adjusting Rate: Short time press: 1, long time Press: 10

TI: 3500~4500 Standard Default Value:

4000 Adjusting Rate: Short time press: 1, long time Press: 10

SS: 1000~1600 Standard Default Value:

1300 Adjusting Rate: Short time press: 1, long time Press: 10

NC: 100~400 Standard Default Value:

250 Adjusting Rate: Short time press: 1, long time Press: 10

TC: 100~7000 Standard Default Value:

1000 Adjusting Rate: Short time press: 1, long

time Press: 10

h. Regulating Temperature control wire calculated cooling

Calculated cooling adjustable range:0.05 -1.5Ω,
Adjusting Rate:0.001Ω,

This function is only available under Temperature Control mode.

The adjustable range is $\pm 20\%$ of current resistance

 **Warning**

- a. Keep the contents of this package out of reach of children and animals.
- b. This product supports vaping with single / dual batteries, please put the battery on the battery tray A when using single battery.
- c. The device uses 5V rechargeable series circuit, and also it supports balance charging. It's normal for the device to get hot during charging.
- d. Please keep device away from heat, fire and water
- e. Please use high rate discharge batteries, a discharge rate over 30A is recommended
- f. While using the device, do not throw/drop it or immerse it in water etc. Doing so may invalidate the warranty.
- g. Please use the proper working mode for your atomizer's design and material.

- h. Do not use batteries whose skin is broken or torn, or which are otherwise not completely insulated.
- i. This product is intended for use with various strengths of e liquid, if you come into direct contact with such liquid whilst using this product please wash your hands and forearms thoroughly. Exposure to such liquid can be harmful if it gets into your eyes, in which case flush your eyes with water and seek medical attention. If swallowed, rinse out your mouth and seek immediate medical attention. When seeking medical advice, have the liquid product container or label at hand.
- j. Do not use if pregnant or breast feeding
- k. Do not use if you have an unstable heart condition, severe hypertension or diabetes. ”
- l. This product contains nicotine which is a highly addictive and toxic substance.”
- m.
 - 1. **EEE Recycling:** This product should not be treated as household waste, instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment.
 - 2. **Battery Recycling:** This products battery should not be treated as household waste, instead it should be handed over to the applicable used battery collection point for recycling.

Manufacture:

VOOPOO®

Address : Block 1, Shapuyangyong
Industry Park, Songgang, Bao'an District,
Shenzhen , Guangdong , China .

Email : support@voopotech.com

Website : www.voopoo.com

Instagram : [voopotechofficial](https://www.instagram.com/voopotechofficial)

Facebook : [voopotech](https://www.facebook.com/voopotech)

Contact in EU :

Vaping Legal Ltd

Address : Armstrong House , First Avenue ,
Robin Hood Airport , Doncaster .
DN9 3GA. UK

Email : compliance@tpdcompliance.eu



Designed by Voopoo in California

www.voopoo.com

Made in China

